

High-Speed **2go**TM

Quick Start Guide & Device User Manual

Mobile Hotspot



Comcast

Welcome

Here's your new Mobile Hotspot!

With the Mobile Hotspot, a Comcast Mobile Broadband device, and High-Speed 2go service, you can simultaneously connect multiple WiFi capable devices to the Internet from virtually anywhere you work and play.

The Mobile Hotspot is a compact WiFi router that uses Comcast's High-Speed 2go service to create a portable WiFi hotspot for your laptop, video console, camera, smartphone, or other WiFi capable device.

High-Speed **2go**[™]

High-Speed 2go Mobile Hotspot

Quick Start Guide



Package Contents

This Mobile Hotspot package contains the following components:

- Mobile Hotspot
- High Capacity Lithium Ion Battery
- AC Power Adapter
- Quick Start Guide & Device User Manual

Minimum Requirements

Hardware:

- Comcast Mobile Broadband device
- WiFi capable device

Service:

- Comcast High-Speed 2go Mobile Broadband service

Browsers:

- Internet Explorer, Safari, Mozilla Firefox or Google Chrome

Get Connected

Connect Your Mobile Hotspot to Your Mobile Broadband Device

- Insert the battery and connect the AC Power Adapter to begin charging the battery. Slide the Power switch to the **ON** position.
- Insert your Comcast Mobile Broadband device into the Mobile Hotspot.

Connect Your Laptop to the Mobile Hotspot


- Navigate to the wireless network connections area on your laptop, and open the list of wireless network connections on your laptop.
- In the list of wireless network connections, select and then connect to the wireless network with a naming convention of “**COMCAST- ###**” (where “**###**” represents the last three characters on the sticker affixed to the bottom of your Mobile Hotspot). If you do not see a network with a “**COMCAST- ###**” name, refer to *Troubleshooting* at the end of the Quick Start Guide portion of this document.

Get Connected

continued

Examples of Wireless Network Connection Screens for Windows and Mac Operating Systems

 
Windows 7

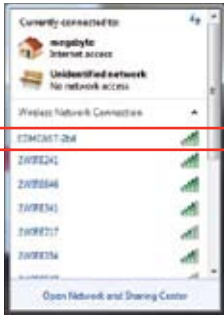


Windows Vista



 Windows XP

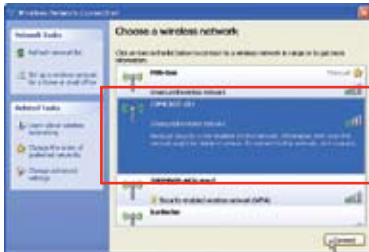

MAC

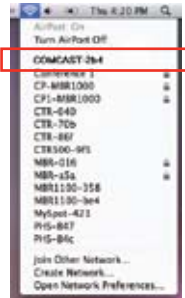 

Get Connected

continued

Login to Your Mobile Hotspot

- Open a new browser window and navigate to a public website, such as **customer.comcast.com/highspeed2go**, the Comcast Service Agreement page automatically displays.



(Sample Screen – Latest Version of Service Agreement Will Display)

Tip: If this page does not display automatically, be sure to navigate to a public website such as **customer.comcast.com/highspeed2go**, and the Comcast Service Agreement page should appear.

Get Connected

continued

- Read the Comcast High-Speed 2go Service Agreement and click the **I Accept the terms in the Service Agreement** button. You will not be able to continue without accepting the terms of the Comcast High-Speed 2go Service Agreement.
- The **Internet Access Hosted by Comcast** page automatically displays after you accept the terms of the Service Agreement.



Type the default password from the label on the bottom of the Mobile Hotspot into the **User Password** entry box. Click the **Login** button.

Example: **Default Password:**

 
073436

If you cannot locate the Default Password, please refer to illustration on page 21.

Get Connected

continued

The **Access Granted** page displays after you enter the default User Password and click on **Login**.

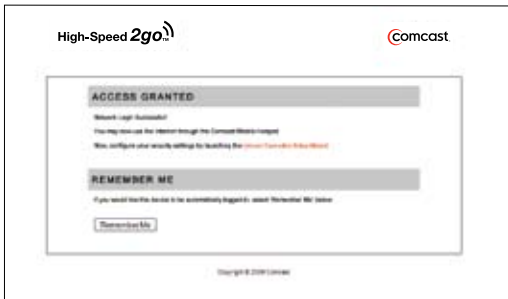

You're connected!

- While you will be able to access the Internet at this point, it is strongly recommended that you establish security settings for your Mobile Hotspot. Please continue to the next section, *Establish Your WiFi Security Settings*, for instructions.

From the **Access Granted** screen, click on the **Internet Connection Setup Wizard** link.

Establish Your WiFi Security Settings

- The **Administrator Login** page displays.

 


- Enter the default password shown on the sticker on the bottom of the Mobile Hotspot into the **Administrator Password** entry box. You will have an opportunity to change this password in the Internet Connection Setup Wizard later. Click on **Log In**.

Establish Your WiFi Security Settings

continued

The **Internet Connection Setup Wizard** page displays.

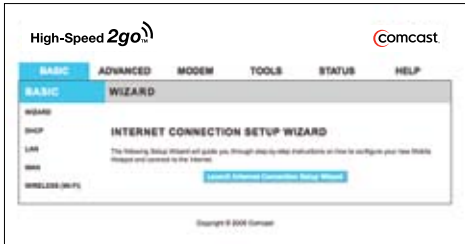

- Click the **Launch Internet Connection Setup Wizard** button to begin.

***Tip:** If the **Internet Connection Setup Wizard** page does not automatically display, click on **Basic** and select **Wizard** from the **Basic** menu. Click the **Launch Internet Connection Setup Wizard** button to begin.*

- Click on **Next** to continue.



Establish Your WiFi Security Settings

continued

- In the **Step 1: Set Your Password and Time Zone** page, the default Administrator Password is pre-populated in the **Administrator Password** and **Verify Administrator Password** entry boxes. Should you desire to change the default Administrator Password, type the new Administrator Password into the **Administrator Password** and **Verify Administrator Password** entry boxes. The Administrator Password is required to make changes to your Mobile Hotspot configuration settings.

Click on the **Time Zone** drop-down box and select the appropriate time zone for your location. Click on **Next** to continue.

The screenshot shows the 'STEP 1: SET YOUR PASSWORD AND TIME ZONE' configuration page for a High-Speed 2go mobile hotspot. The page includes the High-Speed 2go and Comcast logos. It features two password input fields: 'Administrator Password' and 'Verify Administrator Password', both containing the default password 'admin'. Below these fields, there is explanatory text about the default password and instructions on how to change it. At the bottom, there is a 'Time' field set to 'Wed Nov 11 12:01:2015' and a 'Time Zone' dropdown menu currently set to 'GMT-08:00 Pacific Time (US & Canada, Spain)'. Three buttons labeled 'Next', 'Back', and 'Cancel' are positioned below the dropdown menu. A copyright notice 'Copyright 2015 Comcast' is visible at the very bottom of the page.

Establish Your WiFi Security Settings

continued

- In the **Step 2: Configure Security and Name Your Network** page, type into the **WiFi Network Name (SSID)** entry box the name you choose to assign to this WiFi network. The new **WiFi network name** you enter will replace the “**COMCAST - ###**” default network name.
- Click on the radio button in the **WiFi Network Security Level Configuration** options for the level of security you would like to establish. Selecting a security level higher than **None** causes the **WiFi Network Security Password Configuration** option to display.
- Type into the **WiFi Network Security Password** entry box the network security key you want to assign to your WiFi network. This network security key is required to connect WiFi capable devices to this Mobile Hotspot. Store this key in a secure location.

***Tip:** The WiFi Network Security Password equates to either a WEP (Wired Equivalent Privacy), WPA (WiFi Protected Access), or WPA2 network security key, depending on which level of security you have selected for your Mobile Hotspot.*

Establish Your WiFi Security Settings

continued

- Click on **Next** to continue.

High-Speed 2go! Comcast

STEP 3: CONFIGURE SECURITY AND NAME YOUR NETWORK

Change wireless security settings (optional)

Skip wireless security settings

WiFi NETWORK NAME CONFIGURATION

The SSID (name) and security protocol (password) used to identify a WiFi network.

WiFi Network Name (SSID):

WiFi NETWORK SECURITY LEVEL CONFIGURATION

Configure the security level for your network. The security level you choose will determine whether you can connect to your network. The security level you choose will also determine whether you can connect to other networks. The security level you choose will also determine whether you can connect to other networks.

WPA2: Select the option if you want to use WPA2 security. WPA2 is the most secure and recommended security level. It is supported by all modern devices.

WPA3: Select the option if you want to use WPA3 security. WPA3 is the most secure and recommended security level. It is supported by all modern devices.

WPA: Select the option if you want to use WPA security. WPA is supported by all modern devices.

WEP: Select the option if you want to use WEP security. WEP is the least secure and not recommended.

WiFi NETWORK SECURITY PASSWORD CONFIGURATION

The password for the WiFi network. The password must be at least 8 characters long and contain at least one uppercase letter, one lowercase letter, one number, and one special character.

WiFi Network Security Password:

 
© 2018 Comcast. All rights reserved.

Establish Your WiFi Security Settings

continued

The **Step 3: Summary, Save Settings, and Connect** page displays.

- Review your WiFi Network Security Settings in the **Step 3: Summary, Save Settings, and Connect** page, and store this information in a secure location. (A blank page is provided in the back of this *Quick Start Guide & Device User Manual* for this purpose.) Click on **Save** to commit your entries to the Mobile Hotspot.

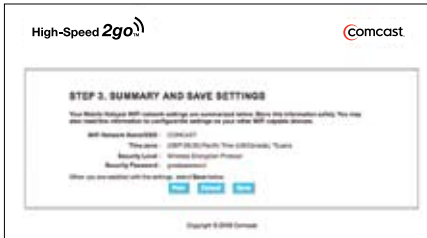

Establish Your WiFi Security Settings

continued


The **Step 4: Reboot Your Mobile Hotspot page** displays

- In the **Step 4: Reboot Your Mobile Hotspot** page, click on **Reboot Now**.



Tip: If you do not reboot now, you could lose your settings. To reboot later, go to the Mobile Hotspot Main menu, click on **Tools**, and select **System** from the **Tools** menu.

- While the Mobile Hotspot is rebooting, the following status message displays

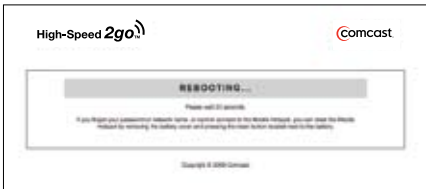

Establish Your WiFi Security Settings

continued

Note: *When the Mobile Hotspot has rebooted, it will operate with your new settings. The rebooting process automatically disconnects all WiFi capable devices connected to the Mobile Hotspot prior to the reboot. These devices will need to be reconnected to the Mobile Hotspot to access the Internet. Please refer to page 5 for information about reconnecting your WiFi capable devices to the Mobile Hotspot*

High-Speed **2go**TM

High-Speed 2go Mobile Hotspot

Device User Manual



Troubleshooting

The following is a partial listing of potential issues and possible solutions. You can also view a full listing of Troubleshooting scenarios online at:

customer.comcast.com/highspeed2go


Trouble Connecting

If you are unable to establish Internet or WiFi connectivity, first verify that LED lights are visible on both your Comcast Mobile Broadband device and your Mobile Hotspot.

Refer to the LED Operation table on the following page for the Mobile Hotspot. Refer to the user documentation provided with your Comcast Mobile Broadband device for Mobile Broadband device LED indications.

No LED Light Visible


If you do not see an LED light on your Mobile Hotspot, verify that the Mobile Hotspot is plugged in, or has a fully charged battery, and that the power switch is in the **ON** position.

If these conditions are met, and you DO NOT see a green LED light next to the Power symbol  on the Mobile Hotspot, contact us at 1-866-206-2182.

Troubleshooting

continued

WiFi LED On But No Internet

If the LED light next to the WiFi Radio symbol  is on, but you cannot connect to the Internet, verify that your Comcast Mobile Broadband device has been properly installed and activated.


Refer to the user documentation provided with your Comcast Mobile Broadband device, or contact us at 1-866-206-2182.

Mobile Broadband device with active High-Speed 2go service plugged into Mobile Hotspot, but no Internet

If your Comcast Mobile Broadband device has been properly installed and it still does not connect to the Internet, GENTLY press the Mobile Broadband device to verify that it is fully plugged into the USB port on your Mobile Hotspot.

If your Mobile Broadband device is not fully plugged in to the Mobile Hotspot, disconnect and then reconnect the device.

Mobile Broadband Device Plugged In But No Internet

If your Mobile Broadband device is fully plugged into the USB port on your Mobile Hotspot, but the LED light next to the Device Connection symbol  on the Mobile Hotspot is red, orange, or off, or you have no LED light visible on the Mobile Broadband device itself, contact us at 1-866-206-2182.

Troubleshooting

continued

No Default Password Sticker

If the Default Password sticker is not present on the bottom of the Mobile Hotspot, open the battery compartment on the bottom of the Mobile Hotspot and remove the battery. A smaller sticker with the MAC Address is under the battery. **The Default Password is the last six (6) characters of the MAC Address.**



The MAC Address is under the battery. **The Default Password is the last six (6) characters of the MAC Address.**

If you cannot locate the Default Password or MAC Address stickers, contact us at 1-866-206-2182.

Troubleshooting

continued

LED Operation

Power

LED Color	Status
Green	Plugged into Wall Power, Internal Battery is Fully Charged, OR Operating Remotely on Fully Charged Internal Battery
Orange	Plugged into Wall Power, Internal Battery is Charging
Red	Battery Charge is Very Low

Device Connection

LED Color	Status
Green	Connection is Established
Orange	Connection is Negotiating
Red	Connection Not Made

WiFi Radio

LED Color	Status
Green	On
Red	WiFi Radio Inoperable

Safe Use Notification

The Mobile Hotspot is intended to be placed on a work surface such as a table, desk or window sill rather than carried or worn on the body when in use.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- This device must accept any interference received, including interference that may cause undesired operation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Safe Use Notification

continued

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Changes or modifications not expressly approved by Cradlepoint, Inc. could void the user's authority to operate the product. This Class B digital apparatus complies with Canadian ICES-003.

Regulatory Approvals

FCC Approval

This device is compliant with Parts 15, 22, and 24 of the FCC Rules (FCC ID: UXX-PHS300).

SAR Value Ratings

Not Applicable: The PHS300CC is intended for desktop use and is not worn or used in close proximity to the body.

Specifications

Mechanical Specifications

Dimensions	4.8 x 2.9 x 0.75 in (122 x 73 x 18.5 mm)
Weight	4 oz (113.4 g)
Form Factor	USB Type "A" Female connector
Antenna Type	Internal 2.4 GHz printed antenna

Environmental Specifications

Operating temperature	32°F to 122°F (0°C to +50°C)
Storage temperature	-4°F to 158°F (-20°C to +70°C)
Humidity	95%, non-condensing

Radio Frequency and Electrical Specifications

Interface type	USB 1.1 compliant
Bands	Common air interface: 802.11 b/g (WiFi Alliance certified)
DC input operating supply	+5VDC @ 2.5A from DC input barrel jack

Notifications

Trademarks

Comcast, High-Speed 2go, and the Comcast logo are trademarks of Comcast.

CradlePoint, WiPipe™, and the WiPipe logo are trademarks of CradlePoint, Inc. in the US and other countries.

Other marks are the property of their respective owners.

Copyrights

© 2010 Comcast. Comcast and the Comcast logo are trademarks of Comcast. Other marks are the property of their respective owners.

Patents

Multiple U.S. Patents pending by CradlePoint, Inc. of the United States for the PHS300CC.

Manufacturer's Warranty



Customer Limited Warranty

Comcast offers the original end user purchaser of the enclosed Mobile Broadband Router (the "Product") from Comcast or an authorized supplier, a personal, nontransferable, limited warranty that during the Warranty Period the Product will be free from defects in material and workmanship under normal use. The "Warranty Period" shall be a period that expires one year from the original purchase date of the Product. During the Warranty Period, if Comcast determines that a Product is defective in material or workmanship, Comcast will, at its sole discretion, repair or replace the Product with a new or rebuilt unit (which unit may use refurbished parts of similar quality and functionality). After the Warranty Period, you are responsible for paying for all parts, labor, and shipping charges. This limited warranty does not cover and is void with respect to:

Manufacturer's Warranty

continued

(a) Products which have been improperly installed, repaired, operated, maintained or modified;

(b) Products which have been subjected to misuse (including using the Products with hardware which is electrically or mechanically incompatible with the Products), abuse, accident, physical damage, abnormal operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness, extreme changes in climate or temperature or environmental conditions not conforming to Comcast specifications or negligent use of the Products or use other than in a normal and customary manner;

(c) Products which have been opened, repaired, serviced, modified or altered by anyone other than Comcast or anyone not authorized by Comcast in writing;

(d) Products which have been damaged due to fire, flood, acts of third persons, acts of God or other acts which are not Vendor's fault and which the Product is not specified to tolerate;

(e) Normal wear and tear, cosmetic damage and shipping damage;

(f) Products which have been operated outside of published maximum ratings;

(g) Consumables;

Manufacturer's Warranty

continued

(h) Cost of installation, removal or reinstallation of the Product;

(i) Signal reception problems (unless caused by a defect in material or workmanship);

(j) Products on which the original identification marks, warranty stickers or serial numbers have been removed, altered or rendered illegible; or

(k) Products designated by Comcast as beta site test samples, experimental, developmental, reproduction, sample, incomplete or out of specification Products.

This limited warranty is not transferable to any third party, including but not limited to, any subsequent purchaser or owner of the Products. Any transfer or resale of any of the Products will automatically terminate Comcast's warranty coverage of such Products.

This limited warranty is only valid in the United States and does not cover customer education, instruction, installation, set-up adjustments or signal reception problems.

COMCAST SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE DUE TO ANY CAUSE, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR ANTICIPATED PROFITS.

Manufacturer's Warranty

continued

REPAIR, REPLACEMENT OR REFUND, AT COMCAST'S OPTION, AS PROVIDED FOR UNDER THIS LIMITED WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THIS LIMITED WARRANTY. COMCAST MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS AND THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF TITLE, INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

To obtain warranty service for Products, please call Comcast at 1-866-206-2182 toll free from anywhere in the continental United States to determine the location of the authorized service center nearest you and for the correct procedures for filing a warranty claim.

Record Your Settings and Store in a Secure Location

WiFi Network Name (SSID)

WiFi Network Security Password

User Password

Administrator Password

