

Audio Device:	Setup Code:
ADC	30531
Aiwa	30158, 30189, 30405
Bose	31229, 31933
Capetronic	30531
Carver	30189
Denon	31360, 31104
Harman/Kardon	30110, 30189
Integra	30135
JBL	30110
JVC	30074
Kenwood	31313, 31570, 30027, 31027
Linn	30189
Magnavox	30189, 30531
Marantz	30189
Onkyo	30135, 30842
Optimus	31023, 30531
Panasonic	31308, 31518
Philips	30189, 31266
Pioneer	31023, 30014, 30531, 31384
Polk Audio	30189
Proscan	31254
RCA	31023, 31254, 30531
Sansui	30189
Sanyo	31261, 31469, 31801
Sony	31759, 30158, 31758
Stereophonics	31023
Sunfire	31313
Technics	31308, 31518
Victor	30074
Wards	30158, 30189, 30014
Yamaha	30176, 31176