




► Quick Start Guide



Conecte.

Decodificador de XFINITY (parte posterior)

El equipo verdadero puede variar.

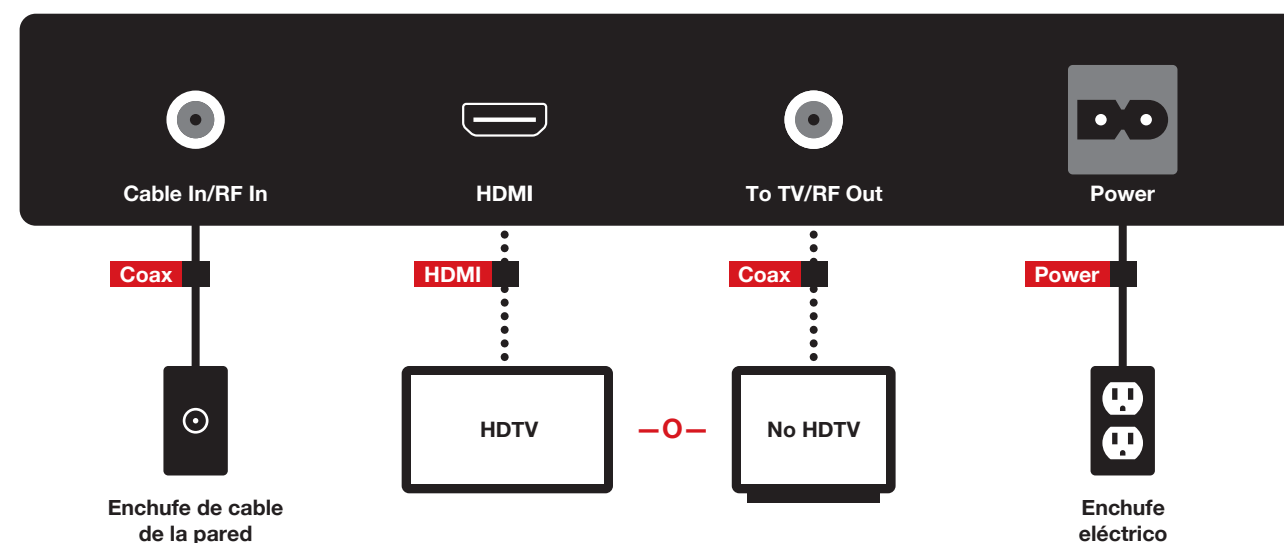

Conecte un cable coaxial desde el enchufe de cable de la pared a la conexión de **Cable In/RF In** en su decodificador. Asegúrese de ajustar esta conexión con los dedos.

Tal vez sólo necesite un cable coaxial para la conexión de su decodificador; de modo que seleccione el largo que se adapte a sus necesidades.

Para la mejor calidad de imagen de HD, conecte el cable de HDMI desde la conexión de **HDMI** en su HDTV a la conexión de **HDMI** en su decodificador.

Si usted está usando el cable de HDMI, sólo usará un cable coaxial para la conexión de su decodificador.

—O—

Conecte el otro cable coaxial desde la conexión de **Cable In/RF In** en su TV a la conexión de **To TV/RF Out** en su decodificador. Asegúrese de ajustar esta conexión con los dedos.

Enchufe el cable eléctrico a su decodificador, luego en un enchufe eléctrico.

Consulte su carpeta de XFINITY para obtener información sobre conexiones alternativas.




Active.

comcast.com/activate



Encienda su TV. Asegúrese de que su TV está colocada en la entrada correcta o canal (3 ó 4).

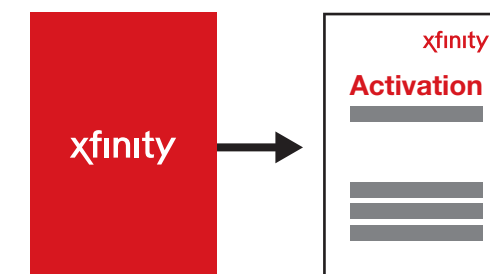

Para activar su servicio, usted va a necesitar la tarjeta de información de activación que se encuentra en su carpeta de XFINITY.

Si usted tiene otros equipos de XFINITY para conectar, complete esas conexiones ahora para poder así activar todos sus equipos a la misma vez.

Para activar:
comcast.com/activate

—O—
1-855-OK-BEGIN (1-855-652-3446)



¡No se olvide de programar su control remoto! Para programar su control remoto con su TV, consulte las instrucciones que vienen con su control remoto. O vaya a comcast.com/remotes.




¿Necesita ayuda? Si desea obtener consejos sobre cómo solucionar problemas, vaya a comcast.com/selfinstall o consulte su carpeta de XFINITY.

© 2013 Comcast. Derechos Reservados.

BL MO QSG SIK 0713

XFINITY® TV Set-Top Box


Inside the Box.

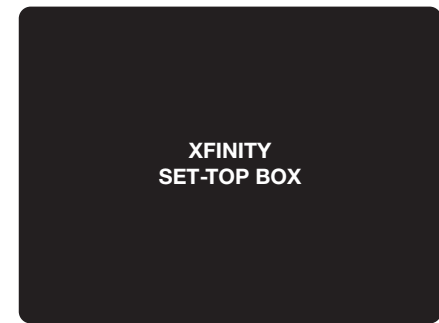


XFINITY
Set-Top Box



XFINITY folder
Activation
Information
card

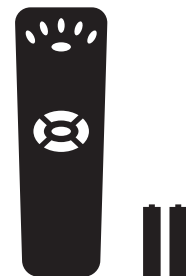


Universal
remote with
2 AA batteries

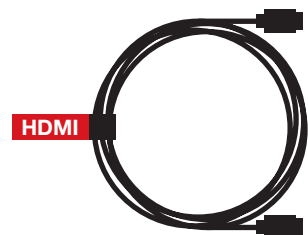


HDMI cable
For HD
customers only



Coax cable

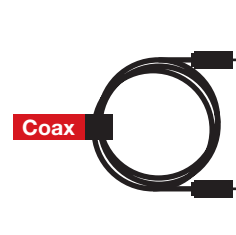

Coax cable

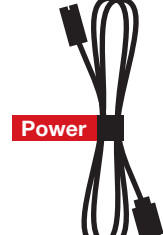

Power
cord


For DIY Videos, Activation and FAQs:
Go to comcast.com/selfinstall —or— scan →



Connect.

XFINITY Set-Top Box (Back)

Actual device may vary.

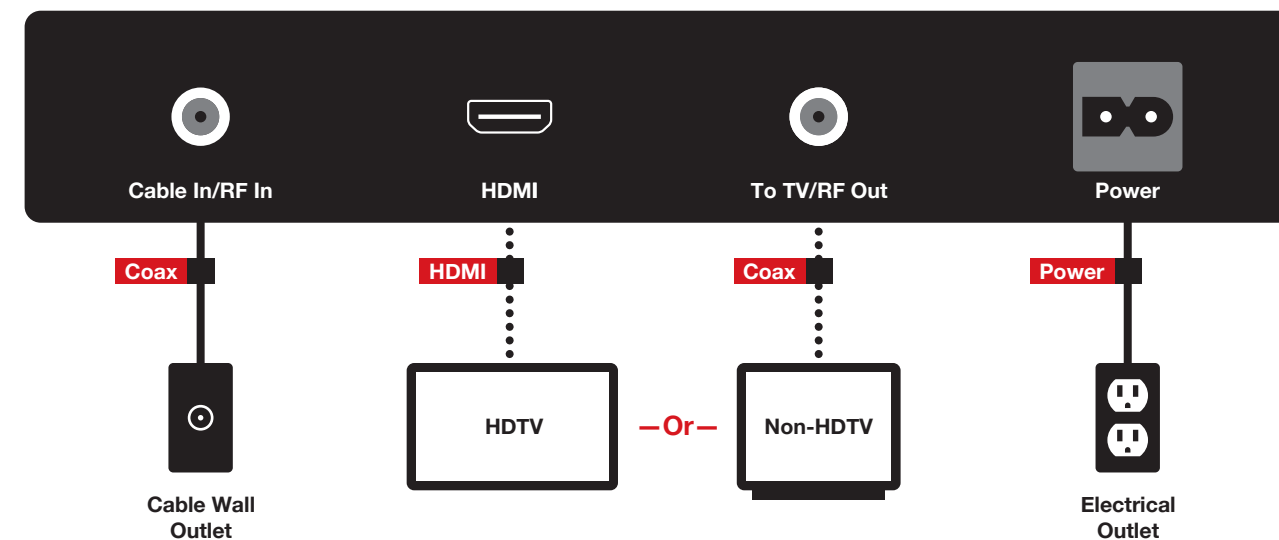

Connect a coax cable from your cable wall outlet to the **Cable In/RF In** connection on your set-top box. Make sure this connection is finger tight.

You may only need one coax cable for your set-top box connection, so select the length that suits your needs.

For the best HD picture quality, connect the HDMI cable from the **HDMI** connection on your HDTV to the **HDMI** connection on your set-top box.

If you are using the HDMI cable, you will only use one coax cable for your set-top box connection.

—Or—

Connect the other coax cable from the **Cable In/RF In** connection on your TV to the **To TV/RF Out** connection on your set-top box. Make sure this connection is finger tight.

Plug the power cord into your set-top box, then into an electrical outlet.

Refer to your XFINITY folder for alternate connection information.




Activate.

comcast.com/activate



Turn your TV on. Make sure that your TV is set to the proper input or channel (3 or 4).

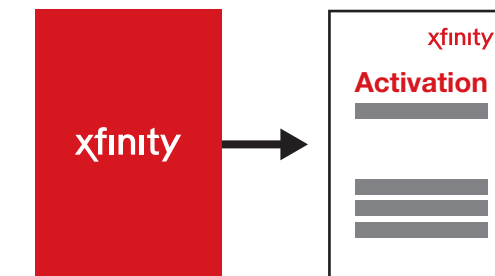

To activate your service, you will need the Activation Information card found in your XFINITY folder.

If you have other XFINITY devices to connect, complete those connections now so you can activate all your devices at once.

To Activate:
comcast.com/activate

—or—

1-855-OK-BEGIN (1-855-652-3446)



Don't forget to program your remote control!

To program your remote to your TV, refer to the instructions with your remote. Or go to comcast.com/remotes.



Need help? For troubleshooting tips, go to comcast.com/selfinstall or refer to your XFINITY folder.

© 2013 Comcast. All rights reserved.