



Welcome to  
XFINITY® TV



# XFINITY® on the X1 Entertainment Operating System®

delivers the simplest, fastest and most complete way to access all your entertainment on all your screens. This guide will help you get to know XFINITY on X1, a one-of-a-kind interactive TV experience.

## Get to Know Your Remote

To pair your remote to your set-top box, press and hold Setup until the LED at the top of the remote turns green. Then, press XFINITY and follow the on-screen instructions.

To pair your remote to your TV or audio device, visit [www.xfinity.com/remotes](http://www.xfinity.com/remotes) for instructions.

Here's a quick review of your remote control to help make the most of your experience.



### Play/Pause

Pause and resume what you are watching. With X1 DVR,™ this also allows you to pause and resume live TV.

### Rewind/Fast-Forward

Rewind and fast-forward a program or skip ahead or back 24 hours in the guide.

### XFINITY

Main Menu to access **Guide**, **Saved (DVR)**, **On Demand**, **Search**, **Apps** and **Settings**.

### Record

Schedule a show or series to record.

### Page Up/Down

Jumps you up/down in menus or forward/backward while watching a show.

### Info

Displays full program information.

### Shortcuts

- Help** when you need it\*
- Display Video** window while browsing menus.
- Launch the **Sports app**.
- Delete** a recording, cancel a scheduled recording or clear history from Last Watched.

### Search

Type the first few letters of an actor, title or genre and get instant results across live TV, XFINITY On Demand™ and your X1 DVR. The number buttons on your remote correspond to letters.

### Exit

Returns you to live TV or the previous menu.

### Guide

Displays channel line up. Press **Guide** twice for guide views to filter listings.

### Last

Takes you back a step in the menu, exits to live TV or shows last channels/shows watched.

*Services and features vary based on service level and equipment. An additional monthly fee applies to DVR service. Your remote control may vary slightly from the one pictured here, but the basic functions should remain the same. Some features may not be available in all areas. For a complete list of Comcast remotes go to [www.comcast.com/remotes](http://www.comcast.com/remotes) for more details. Only DVR set-top boxes can pause or rewind live TV.*

*\*Not available on all set-top boxes.*

## On-Screen Guide

---

XFINITY® on the X1 Entertainment Operating System® gives you a one-of-a-kind interactive TV experience.



### **PRESS** **FOR THE MAIN MENU**

- **Guide** — Channel line up and listings.
- **Saved** — DVR Recordings, Favorites, Purchased and For You.
- **On Demand** — TV shows, movies, kids' programming and more available instantly.
- **Search** — Search across live TV, XFINITY On Demand™ and the X1 DVR™ at the same time.
- **Apps** — Pandora, Sports App, Weather, etc.
- **Settings** — Preferences, device settings and parental controls.



## **BROWSE THE GUIDE TO SEE WHAT'S AIRING ON LIVE TV UP TO TWO WEEKS OUT**

Highlight a program and press **OK** to see a description and select from actions.

**Tip:** Press Fast-Forward on the remote to jump forward 24 hours in the guide.

To narrow listings, press Guide twice on the remote and select a Guide View. Choose from: HD, Favorites, Trending, Movies, Kids, or Sports.

**Tip:** To set a favorite channel, highlight the number/logo in the guide and press **OK**, then select Favorite.



## **USE ON DEMAND TO ENJOY INSTANT ACCESS TO TV SHOWS AND MOVIES**

- Browse thousands of hit movies, the latest episodes of the top 100 shows, and loads of kids' programming.
- Use filters or sort to narrow choices in certain menus. For example, you can filter by "Free to Me" or sort by "Most Recent."
- You can watch selections for free, rent for a specific time window, or buy to own and watch as many times as you like.



## FIND WHAT YOU'RE LOOKING FOR

- Type the first few letters of an actor, channel, title, team or genre and get instant results across live TV, XFINITY On Demand™ and your X1 DVR.™ The number buttons on your remote correspond to the letters.
- Seamlessly flip to your most recently watched shows, DVR recordings and XFINITY On Demand programs by pressing the Last button while watching TV.



## GET RECOMMENDATIONS AND BOOKMARK FAVORITES

- Get recommendations when you select any program and scroll down to More Like This. You will see a list of similar movies and shows you might enjoy or other programs with specific cast or crew members.
- Keep track of your favorite actors, shows, teams and movies by marking them as a Favorite, then find them in the Saved menu to watch anytime.
- In the Saved menu, get recommendations based on what you've watched by selecting For You.



## FIND YOUR RECORDINGS AND FAVORITES IN SAVED

- There is a menu just For You that includes recently watched and recorded shows, channels, and apps, plus recommendations on what you may like.

## RECORD, WATCH, AND MANAGE SHOWS WITH YOUR ADVANCED DVR

- Record up to four shows at once, just highlight the program in the Guide, a search result, or while watching TV and press **RECORD** on your remote. For a TV series, you can record Just This Episode or All Episodes to create a series recording. Specify recording options — including the channels to record on or ending a recording late.
- Watch recordings in any room – go to Saved and select Recordings.
- To delete recordings, highlight the program or folder of recordings and press **DELETE** on our remote, then press **OK** to Delete Now. Pressing **DELETE** will send deleted recordings to your Recently Deleted folder.

## QUICK ACCESS TO YOUR SHOWS IN FAVORITES AND PURCHASES

Choose Saved in the Main Menu to access:

- **Favorites** are shortcuts to your preferred movies, TV shows, actors, channels and sports teams. Select the Favorite option from Program/Series Information.
- **Purchases** include the TV shows and movies you have purchased to own.

*XFINITY On Demand™ programming requires subscription to TV service package with XFINITY On Demand programming. XFINITY On Demand selections subject to charge indicated at time of purchase. Not all services available in all areas. Pricing and services subject to change. Limited Basic Service subscription required to receive other levels of service. Call for restrictions and details.*



## APPS RIGHT ON YOUR TV


Access your favorite social, music, sports and weather apps on your TV.

- **Sports** — Track multiple games at once and check the latest scores and standings.
- **Social Media** — View photos and more.
- **Pandora** — Listen to music channels on TV.
- **Tips and Tricks** — Get updates on the latest features and shortcuts.
- **Weather** — Get the current and extended forecast.
- **My Account** — View your bill, appointments or troubleshoot your service.

Some apps, such as Pandora, require initial setup online. Go to [www.xfinity.com/x1apps](http://www.xfinity.com/x1apps) to connect these apps to your TV.

Want to watch TV on your mobile device? Go to [www.xfinitytv.com/apps](http://www.xfinitytv.com/apps) to learn more.

## MORE CONTROL AT YOUR FINGERTIPS

Select the  in the Menu page to manage Menu Preferences, Device Settings and Parental Controls.

- **Menu Preferences** include changing the background darkness level and auto-tuning to HD channels.
- **Device Settings** include options for closed captioning, video resolutions, audio settings and light brightness of your set-top box.
- **Parental Controls** allow you to restrict viewing on your TV. Go to [www.xfinity.com/parents](http://www.xfinity.com/parents) for more information.

For more help on how to use XFINITY on X1, go to [www.xfinity.com/x1support](http://www.xfinity.com/x1support).