

Welcome to XFINITY® on The X1 Entertainment Operating System®

Here are some tips to help familiarize you with the new guide.

For more - go to xfinity.com/x1support or **Settings > Help*** on your TV to watch tutorial videos.

Using the Guide:

Watch as you browse

Continue watching your program while browsing the Guide, XFINITY On Demand™, and more. Video will always be playing full screen behind the Guide. Go to “Settings” to change the background darkness level to make your program more visible or press “B” on the remote for a smaller video window.



Skip to tomorrow's listings in the guide

While browsing the guide, press the **fast forward button** to jump ahead a day or the **rewind button** to jump back a day. Both will jump 24 hours from your current position in the guide.

See what's on now or next

You can continue watching your program while browsing what else is airing now. Press the **Right Arrow** while watching TV to see a list of what's currently on all of your channels.

Press the **Right Arrow twice** to browse the full programming schedule for a specific channel up to two weeks out.

View what's on your favorite channels

To set up favorite channels, Press “**Guide**” on your remote control. Scroll left to highlight a channel logo and number, press “OK”, and select “Favorite” from the options.

To view the guide by Favorites, Press “**Guide**” **twice** on your remote. Select “Favorites” as your Guide view to see what's on only those channels.

Filter your guide

Press “**Guide**” **twice** on your remote to choose a filtered Guide view like Favorites, HD, Sports and more.

Filter XFINITY On Demand listings

To narrow listings in a collection, scroll to the top to select filter options like HD, New or Free.

Restart or watch now

Miss a few minutes or want to watch right now? Look for indicators in the Guide to let you know you can watch the show with XFINITY On Demand.



Navigation:



Using your remote

Your remote can navigate the menus, provide shortcuts, and control your TV or audio device. To pair your device with a TV or audio device, go to comcast.com/remotes for instructions. To pair your remote to your set-top box so you can aim it anywhere, press and hold "setup" until the light on your remote turns to green, then press the XFINITY button and follow the on-screen instructions.



See your last watched or go back in the menu

Press "Last" while watching TV to see the last channels you've watched, as well as the last DVR recordings or XFINITY On Demand programs you've watched.

While navigating the Guide or XFINITY On Demand, press "Last" to go back a step or keep pressing until you return to live TV.



Video controls

You're always in control. To access on-screen playback controls, including Closed Captioning, press the Down Arrow on your remote while watching TV.



Read full show descriptions

If a program description runs off screen, you can press "Info" on your remote to expand the screen and read the full program description.



Never miss a score

Press the "C" button to launch and use the sports app to track multiple games at once and check the latest scores and standings, all while watching another game.



Search even faster

Search even faster using the keypad on your remote to spell out a title, sports team or personality. For example, for "Blacklist" start pressing 2522. You can start typing at any point — while watching TV, or in the Guide.



Jump back to Live TV

After pausing or replaying live TV, you can return to the live airing point by pressing "Exit".



Jump ahead in a program

Press "Page Up" while watching XFINITY On Demand or DVR recordings to jump ahead a few minutes in the show. The "Page Down" button will jump back a few minutes.



Change your background darkness level

Adjust your background darkness level in **Settings > Preferences > General** to see more or less of the video playing in the background.

Navigation:



See what's included in Saved

Saved includes all of your recorded shows from your DVR, upcoming scheduled recordings, Favorites (shows, movies, personalities, and teams) and XFINITY On Demand purchases. Select "For You" to see shows you've watched or recorded and new recommendations.



Manage the priority of your recordings

Use the Series Priority in **Saved > Scheduled** (scroll to the top) to update or cancel any of your series recordings.



Use the "D" button to delete

The "D" button on your remote can be used to delete any recording or to cancel a scheduled recording. Just **press "D"** to delete a single program or a folder of programs.



Restore deleted recordings

You can restore deleted programs by navigating to **Saved > Recordings**. The last folder on the page is called **"Recently Deleted"**. Press "OK" on your remote to see all of your recently deleted recordings, and select the title of the recording you wish to restore. Press "OK" and select "Restore".



Keep up with your favorite shows

Progress bar indicators make it easy to know what to watch next. Look for "watched" indicators to see which episodes you've already watched. Select **"Mark Unwatched"** to clear the indicator.

Extras:



Turn any device into a personal TV screen anywhere in your home

With the free XFINITY TV app, stream any channel live, watch XFINITY on Demand, and access your DVR shows on your tablet or smartphone. Plus, stream your recordings from anywhere or even download to your tablet or smartphone to watch while you're offline. **Available from iTunes and Google Play.

***Note: Currently only available to video customers with IP streaming entitlement and X1 DVR with cloud technology – in select markets*



Beta test new features before they go live

Go to settings > Comcast Labs to test innovation before it receives the final stamp of approval. Check back frequently to see new experimental features added regularly.



Get help

Press "A" for Help on how to make the most of your TV experience.



Use apps on your TV

Select "Apps" in the Main Menu to browse apps for daily life (like Sports & Weather), access other XFINITY Services, or view personal photos & music on the big screen. Some apps require initial set up at xfinity.com/profile where you'll need your Comcast ID to login. If you don't know your Comcast ID, go to comcast.com/myaccount.