
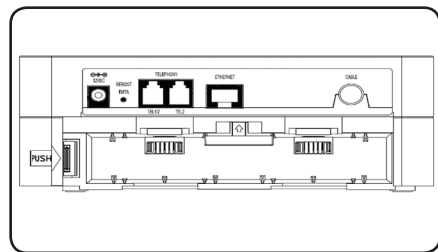


# battery

## INSTALLATION AND REPLACEMENT


Enclosed is the battery that you requested for your voice modem. The battery is easy to install as outlined in the instructions below.

1. Unplug your CDV modem from the power outlet to install the battery.
2. Remove the battery cover on the rear panel. There are two battery compartments. You may install a single battery into either compartment.

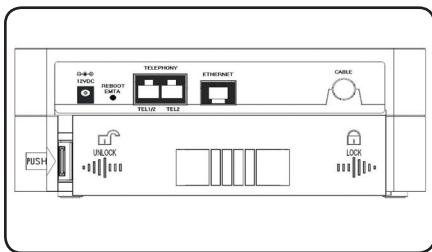

**Please note:** The center battery-retention slider must be positioned to allow for battery insertion. After insertion, the slider should be moved back to the center (retaining) position.

3. Insert the battery into one of the rear battery compartments, as shown in the illustration, then replace the battery cover.

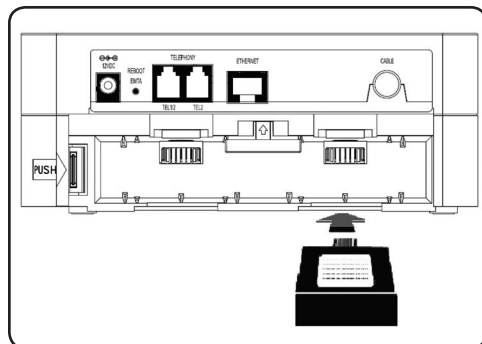

Once the battery installation is complete, plug your CDV modem back into the power outlet. Check for dial tone. The battery can take up to 24 hours to fully recharge.

Thank you!